



IMPORTANT NOTICE - READ CAREFULLY

Telescoping Curb Box Installation Instructions

Before Beginning


1. Remove any plastic plugs and ties that would interfere with curb box operation or access to curb valve.
2. Ensure lid and base joints are hand tight.

Adjustment

1. Loosen nut at top of lower section by turning nut counter-clockwise.
2. Pull up upper section to desired height.
*Note: If equipped, shutoff rod will automatically adjust and remain 2" below lid.
3. Tighten nut hand tight.

Connecting and Backfill

1. If equipped, connect shutoff rod to valve cap with cotter pin.
2. Connect curb box to valve
- Minneapolis Pattern base – Thread Curb box onto valve.
- Arch Base – Place arch over valve.
3. Backfill EVENLY around curb box.

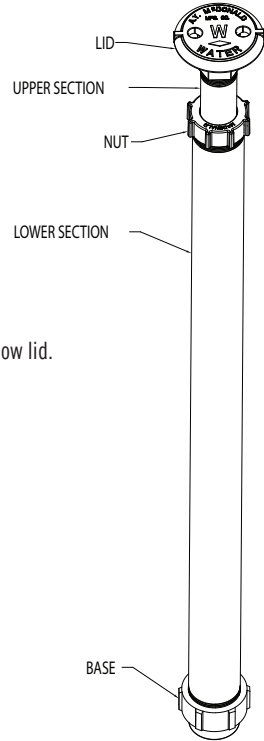


Telescoping Curb Box Options

Lids



5541
1 1/4" Adapter
Erie Pattern

Bases



Minneapolis Pattern
2" - 5514CPLG 2 x 2
1 1/2" - 5514CPLG 1 1/2 x 2



5614
Tapped 1 1/4"

Arch Pattern
5504SA



WARNING: It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380.



IMPORTANT NOTICE - READ CAREFULLY

Telescoping Curb Box Installation Instructions

Before Beginning


1. Remove any plastic plugs and ties that would interfere with curb box operation or access to curb valve.
2. Ensure lid and base joints are hand tight.

Adjustment

1. Loosen nut at top of lower section by turning nut counter-clockwise.
2. Pull up upper section to desired height.
*Note: If equipped, shutoff rod will automatically adjust and remain 2" below lid.
3. Tighten nut hand tight.

Connecting and Backfill

1. If equipped, connect shutoff rod to valve cap with cotter pin.
2. Connect curb box to valve
- Minneapolis Pattern base – Thread Curb box onto valve.
- Arch Base – Place arch over valve.
3. Backfill EVENLY around curb box.

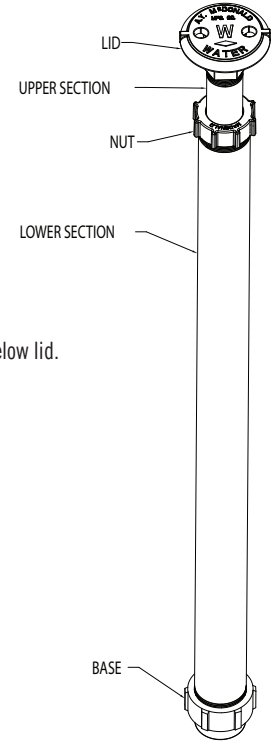


Telescoping Curb Box Options

Lids



5541
1 1/4" Adapter
Erie Pattern

Bases



Minneapolis Pattern
2" - 5514CPLG 2 x 2
1 1/2" - 5514CPLG 1 1/2 x 2



5614
Tapped 1 1/4"

Arch Pattern
5504SA



WARNING: It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380.